

OPENING DOORS

If your Model S is equipped with the Tech Package option, walk up to the driver's door when you have your key with you, and the door handles extend.* Insert your hand into the handle and pull to open the door. Without this option, unlock Model S with the key, then press the handle to extend it.

Open the trunk without using the key simply by touching the switch located under the liftgate handle.



NOTES:

If keyless entry doesn't work, use your key as described on this page.

Door handles retract if you don't use them within a minute after they extend. Press a handle to extend it again. Door handles also retract a minute after the last door closes, when Model S begins moving, and when you lock it.


* Door handles extend automatically only if the AUTO-PRESENT HANDLES setting is turned ON (see page 9).

USING YOUR KEY

To familiarize yourself with the key, think of it as a miniature version of Model S, with the Tesla badge representing the front.

TRUNK

Double-click to unlock or to open/close a powered liftgate.
Single-click to stop/start the movement of a powered liftgate.

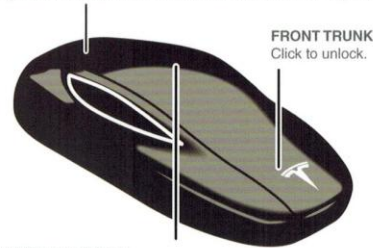

LOCK/UNLOCK ALL

Double-click to unlock doors (lights flash twice and handles extend).
Single-click to lock doors and the trunks (lights flash once and handles retract).
Press and hold to lower all windows.

NOTES:

You don't need to point the key at Model S, but you must be within operating range (which varies depending on the strength of the key's battery).

Radio equipment on a similar frequency can affect the key. If this happens, move the key at least a foot away from other electronic devices (phone, laptop, etc).

If the key doesn't work, you may need to change its battery. Even if the key's battery is discharged, you can open Model S by following the procedure described on page 30.

From inside Model S, you can lock and unlock doors, trunks, and the charge port using the touchscreen (see page 10).

Starting and Driving

No Ignition Button

Just Press the Brake and Select a Gear (Right Side Column Lever)

Parking and Power Off

Pressing the Parking button on the end of the Gear Selector

Leave with Key (If keep key inside power is keeping ON for 15min)

Manually Power Off >> Touch CONTROLS > E=BRAKE & POWER OFF

Cautions : Keeping Power On consume Energy.

【日本語説明】

・ ドアの開錠

車型リモコンの屋根部を”ダブルクリック”すると開錠されドアノブがせり出してくる
この操作でメイン電源も入る

・ 運転操作

イグニッションキーは無いので、ブレーキを踏みながら右側シフトレバーを操作して
DまたはRに入れ、アクセルを踏めば動き出す
クリーピングはONとなっているので、ブレーキを離だけでもわずかに動く

・ パーキングと電源オフ

シフトレバーのPボタンを押すとPモードに入る
リモコンを持って車から離れると電源オフとなる
マニュアル操作 >> 中央スクリーンの CONTROLS > E=BRAKE & POWER OFF を押す

注意：電源ON状態ではエネルギーを消費する